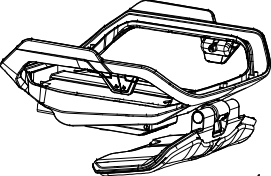

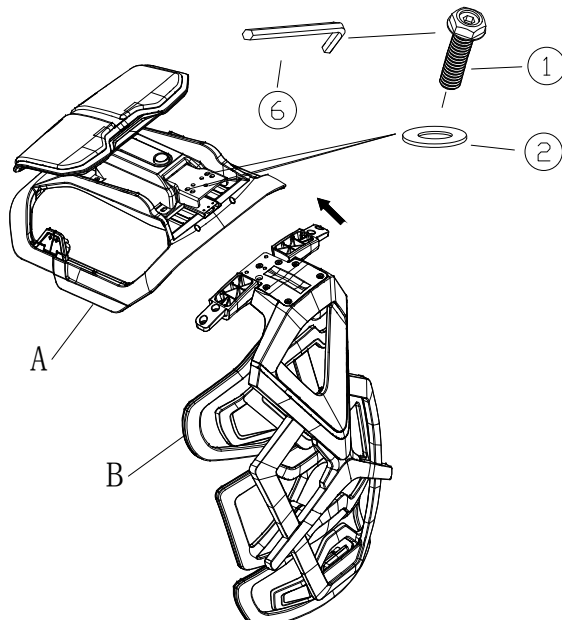
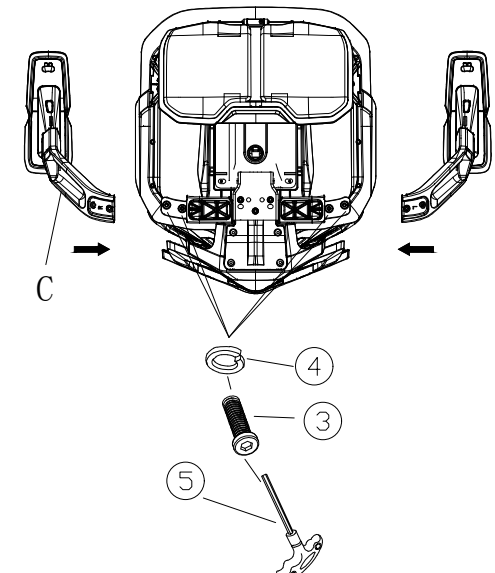
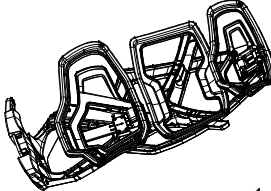


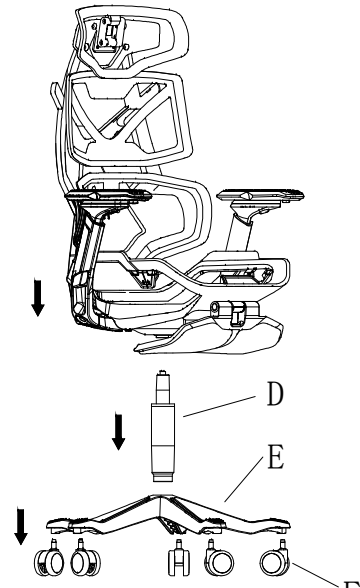
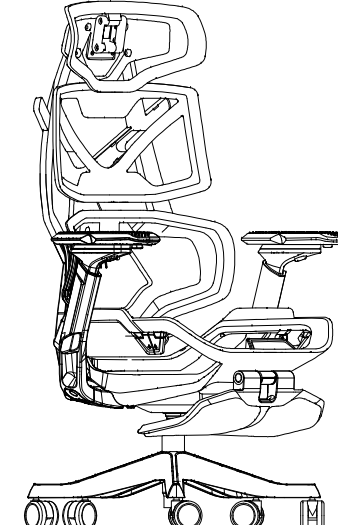
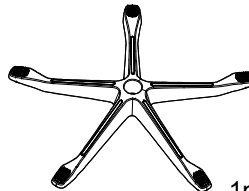
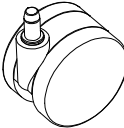


ІНСТРУКЦІЯ ПО СКЛАДАННЮ КРІСЛА «STORM»

A  1pcs	①  M8*20 3pcs	 Diagram showing the assembly of the chair's backrest and armrests. Part A is attached to the backrest frame (6) using screws 1. Part B is attached to the armrest frame using screws 2. Part C is attached to the seat frame using screws 3 and 4. The seat frame is then attached to the base (5) using screw 6.	 Diagram showing the assembly of the chair's base. The base (5) is attached to the seat frame using screw 3. The base is then attached to the seat frame using screw 4. The base is then attached to the seat frame using screw 5.
B  1pcs	②  φ8*20 3pcs		
C  1pcs	③  M6*20 4pcs		
D  1pcs	④  φ6*10 4pcs	 Diagram showing the assembly of the chair's base. The base (5) is attached to the seat frame using screw 3. The base is then attached to the seat frame using screw 4. The base is then attached to the seat frame using screw 5. The base is then attached to the seat frame using screw 6.	 Diagram showing the final assembly of the chair. The chair is shown in its fully assembled state, including the backrest, armrests, seat, and base.
E  1pcs	⑤  4mm 1pcs		
F  5pcs	⑥  5mm 1pcs		